

EXFIL[®] FACE SHIELD

INSTALLATION INSTRUCTIONS

helmet accessories —



INNOVATE TO PROTECT



PURPOSE

A low-profile, lightweight face shield system that mounts quickly and tool-free to the front section of the EXFIL® Rail 3.0, protecting the face from liquids and various projectiles. It quickly adjusts into three preset positions (down, up and stowed) and provides clearance for NVG mounts when in the stowed position.

CONTENTS

- > One (1) Assembled EXFIL® Face Shield
- > One (1) Lens Cloth

PERFORMANCE STANDARDS

Exceeds optical and strength requirements of BS EN 166:2002 Class 2B

NOTE

The face shield size should correspond with the size of your EXFIL® Ballistic SL, EXFIL® Ballistic or EXFIL® Carbon fitted with an EXFIL® Rail 3.0. The size 1 face shield fits both sizes of the EXFIL® LTP fitted with an EXFIL® Rail 3.0. The face shield size is shown on the inside of the vertical arms of the face shield frame.

NOTE

The EXFIL® Face Shield contains an anti-scratch coating, but scratching still may occur.

INSTALLATION

STEP 1

Ensure both face shield adapters are rotated parallel to the ground (figure 1).

STEP 2

Simultaneously slide each face shield adapter onto the corresponding rail: the left arm and adapter on the left rail and the right arm and adapter on the right rail as shown in figures 2A, 2B and 2C. This may require pushing the thumb levers indicated in figure 2D up off the rail while sliding the adapters and/or holding the helmet against the body for leverage. Push the adapters all the way back until the lever locks into the third Picatinny slot (figure 2D).



FIG 1



FIG 2A



FIG 2B



FIG 2C



FIG 2D

OPERATIONAL INSTRUCTIONS

TO STOW IN THE UPRIGHT POSITION

Use your thumb to push the back of the larger fin on either side, rotating the face shield upward (figure 3). Once the side edge of the face shield reaches the brim of the helmet, you will hear an audible click when it locks into position one (figure 4). Continue to firmly push the face shield upward until you hear a second audible click; this is the last locking position (figure 5).



FIG 3



FIG 4



FIG 5

TO VENT THE FACE SHIELD WHEN IN USE

Push the thumb lever on both face shield adapters up off the rail (figure 6A). While holding them up, push the face shield forward (figure 6B) to the middle Picatinny slot (figure 6C).



FIG 6A

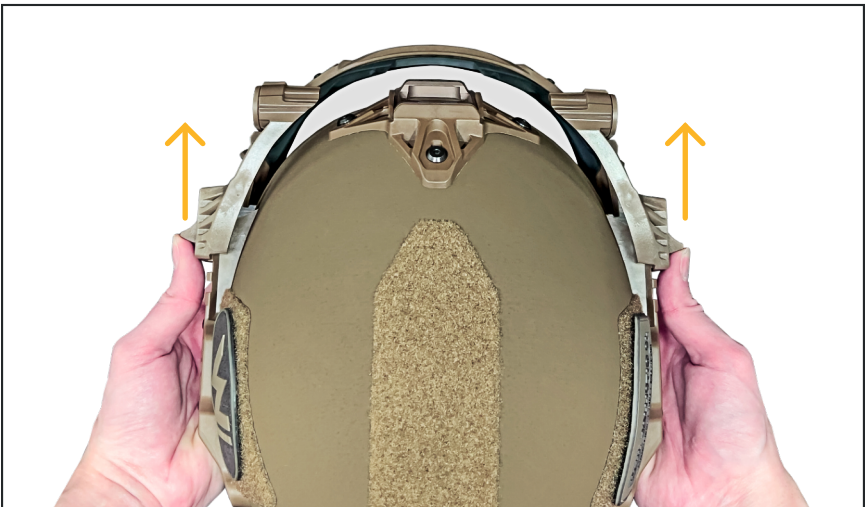


FIG 6B

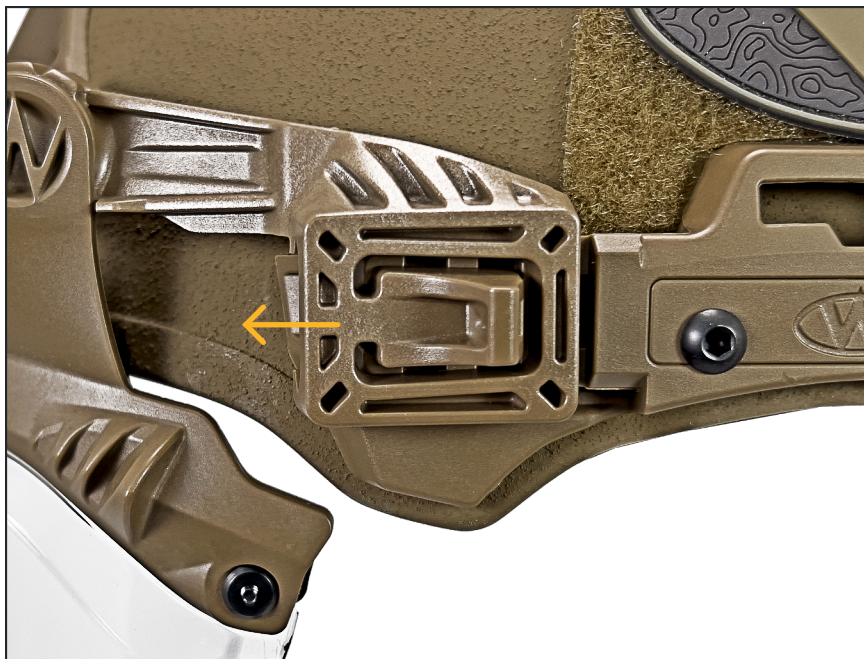


FIG 6C

TO REMOVE THE FACE SHIELD

Push the thumb lever on both face shield adapters up off the rail (figure 6A). While holding them up, pull the face shield forward (figure 6B) with even pressure on both sides until the face shield has detached.

G455