

SHROUD ACTION CAMERA ADAPTER

INSTALLATION INSTRUCTIONS

helmet accessories —



INNOVATE TO PROTECT



PURPOSE

Allows the attachment of an action camera to a helmet with a shroud. The adapter is compatible with action cameras from several manufacturers, such as GoPro®, GARMIN® and other models with similar mounting interfaces.

CONTENTS

- > One (1) Shroud Action Camera Adapter
- > One (1) Thumbscrew

INSTALLATION

STEP 1

Insert the lower retention tab (A) into the lower shroud interface (figure 1).

STEP 2

While pressing the upper tab (B) downward, pivot the camera adapter towards the helmet (figure 2).



FIG 1

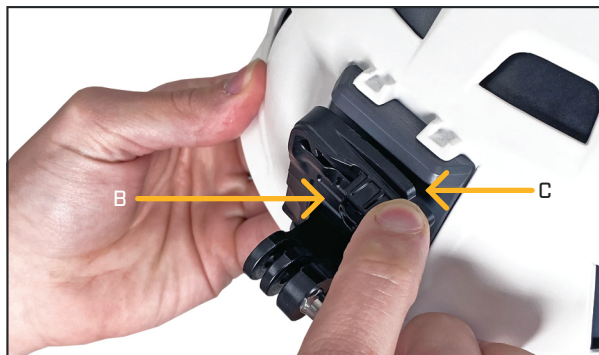


FIG 2

STEP 3

Release the upper tab once the camera adapter is flush with the shroud. The upper retention tab (C) should fully engage the upper shroud interface but may require a firm upward push.

STEP 4

Once fully engaged with the shroud interface, rotate the swivel lock to the upright position to engage the lock and secure the connection to the shroud interface (figure 3).



FIG 3

STEP 5

After the adapter is locked on the shroud, slide the two mounting tabs on the camera's housing into the slots between the adapter mounting tabs. Ensure the holes in the camera mounting tabs are aligned with the holes in the adapter mounting tabs (figure 4).



FIG 4

STEP 6

Once aligned, insert the thumbscrew through the holes until it reaches the threads in the cap nut (figure 4). Tighten firmly.







G480