

SHROUD HEADLAMP ADAPTER

INSTALLATION INSTRUCTIONS

helmet accessories —



INNOVATE TO PROTECT



PURPOSE

Allows standard headlamps with elastic straps that pass behind the headlamp to attach to a helmet with a shroud. The adapter restrains the headlamp from sliding off the helmet shell during activity.

CONTENTS

- > One (1) Shroud Headlamp Adapter

INSTALLATION

STEP 1

Insert the lower retention tab (A) into lower shroud interface (figure 1).

STEP 2

While pressing the upper tab (B) downward, pivot the headlamp adapter toward the helmet (figure 2).



FIG 1



FIG 2

STEP 3

Release the upper tab once the headlamp adapter is flush with the shroud. The upper retention tab should fully engage the upper shroud interface.

STEP 4

Position your headlamp (not included) near the headlamp adapter. Slip the small portion of headband strap that lies between the headlamp attachment points behind the headlamp adapter retaining tab (C) as shown in figure 3.

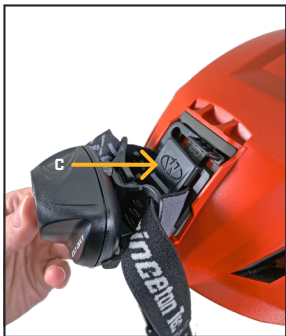


FIG 3



FIG 4

STEP 5

Route the headband of the headlamp over the back of the helmet. If mounting the adapter to a Team Wendy® SAR with accessory rails, secure the rear strap to the SAR Rail system retaining feature (figure 4).

G475