

SAR SOLAS REFLECTIVE KIT

INSTALLATION INSTRUCTIONS

helmet accessories —



INNOVATE TO PROTECT



PURPOSE

The SAR SOLAS Reflective Kit enhances visibility using reflective tape and patches. Included side and crown VELCRO® loop patches can also be used for attaching ID badges and strobe devices.

CONTENTS

- > One (1) Crown Beacon Loop Patch
- > One (1) Rear Tape Strip
- > One (1) Rear Brim Tape Strip
- > One (1) Front Brim Tape Strip
- > Two (2) Side Loop Patches (Left and Right)
- > Two (2) Crown Tape Strips

INSTALLATION

STEP 1

Ensure your SAR helmet is clean and dry.

STEP 2

Apply the tape following the placements in figures 1 through 6. When installing loop patches, first remove the reflective patch from the black VELCRO® loop and adhere the loop to the helmet.

NOTE

This kit includes ORALITE® SOLAS (Safety of Life at Sea) tape and patches that are U.S. Coast Guard-approved. All included items can be installed on the helmet for maximum visibility.

NOTE

Removing the reflective tape from helmet may leave residue. Remove any residue by hand washing the helmet shell with a mild soap or detergent.



FIG 1

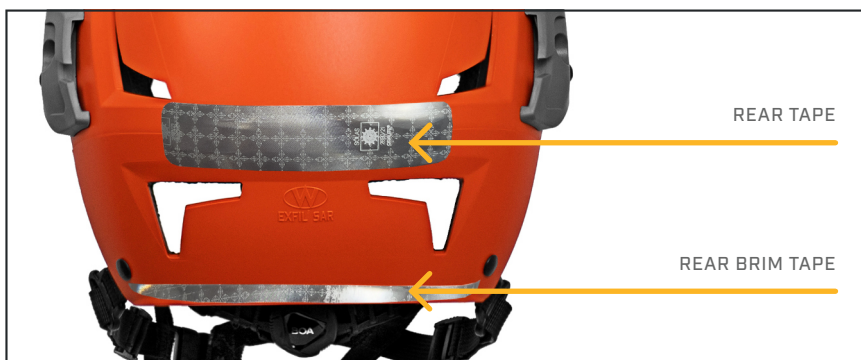


FIG 2



FIG 3



FIG 4



FIG 5

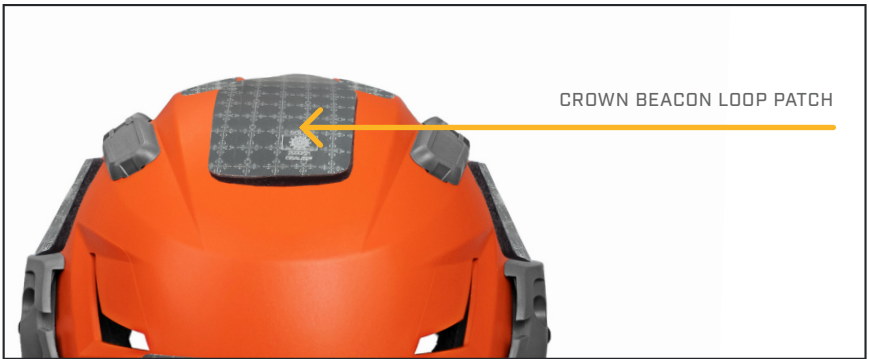


FIG 6

G432-1