

EPIC AIR[®] LINER SYSTEM

INSTALLATION INSTRUCTIONS

aftermarket systems —



INNOVATE TO PROTECT



PURPOSE

The EPIC Air® design utilizes Team Wendy's proven Zorbium® foam technology, offering leading-edge impact protection without adversely affecting weight or heat dissipation. Integrated air channels keep you cool while customizable comfort pads provide optimal fit. EPIC Air® is compatible with all standard ground combat helmets.

CONTENTS

- Two (2) Air Channels (Preinstalled in the Front Impact Liner Pad)
- Three (3) EPIC Air® Impact Liner Pads (Rear, Crown, Front)
- Seven (7) Thin Pads (Various Shapes/Sizes)
- Seven (7) Thick Pads (Various Shapes/Sizes)

VELCRO® Brand Hook Disks Not Included

PERFORMANCE STANDARDS

Exceeds ACH blunt impact requirements (AR/PD 10-02)

INSTALLATION

STEP 1

The two air channels come preinstalled on the front impact liner. Ensure that the arrow-shaped tabs on the sides of the two air channels are still fully inserted into the fabric slots on either side of the recessed fabric areas (figure 1).

STEP 2

Take the front pad of the impact liner and fold the flaps upwards. Align the front of the pad with the edge of the helmet and press down (figure 2). Repeat for the rear pad, followed by the crown pad from side to side. Ensure that the front and back liner edges are flush with the respective edge of the helmet (figure 3).

STEP 3

Attach comfort pads directly to the impact liner as shown in figure 4. Feel for discomfort and pressure points. Adjust comfort pad type (thick vs. thin) and placement as needed for optimal fit.

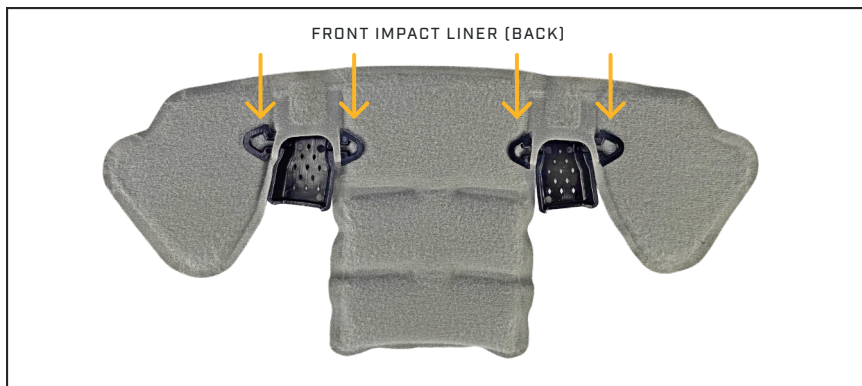


FIG 1



FIG 2



FIG 3



FIG 4

PAD CLEANING

Remove pad(s) from helmet and hand wash with mild soap. Allow pad(s) to air dry completely before reinstalling.

PAD REPLACEMENT

Periodically inspect the pads for damage or wear. Replace any pads with cuts, tears or gross deformation.

6228