

M-216™ TACTICAL CHIN CUP

INSTALLATION INSTRUCTIONS

helmets —



INNOVATE TO PROTECT



PURPOSE

The M-216™ Tactical has a military grade (6061) machined aluminum shroud insert with type III hard anodizing for mounting night vision devices, headlamps or cameras. Removable chin cup adds stability when running these devices.

INSTALLATION

INSTALLING THE CHIN CUP

STEP 1

On the right strap, route the end of the strap out of the rubber ring toward the buckle (figure 1). Remove the buckle and the rubber ring.



FIG 1

STEP 2

Unfasten the center hook and loop band on the chin cup. Slide the right strap through the two loops on the chin cup (figure 2) and pull to allow at least 4-6" of the right strap to extend past the chin cup.

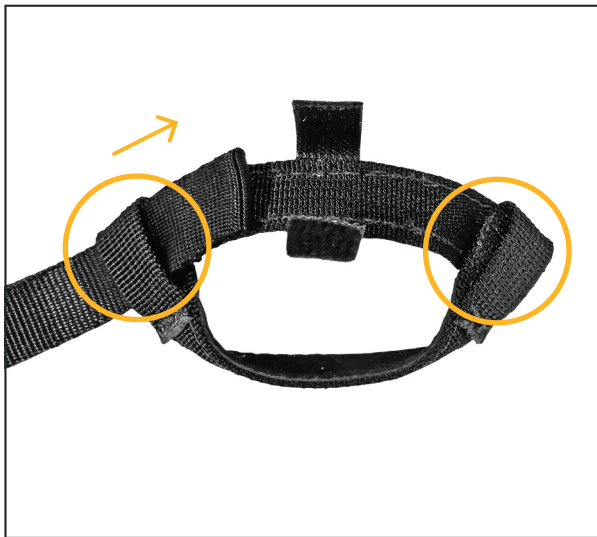


FIG 2

 NOTE

The chin cup should be oriented so that the VELCRO® tabs and loops are facing the front of the helmet, allowing the right helmet strap to pass across the front of the chin when wearing.

STEP 3

Slide the rubber ring back onto the right strap. Pass the end of the right strap first through the innermost buckle slot from the back to the front (figure 3) and then through the outermost slot from the front to the back of the buckle.



FIG 3

NOTE

Be aware of the orientation of the buckle to ensure it will interface with the other side without twisting the straps.

STEP 4

Adjust the strap length to properly secure the helmet. Pass the loose end of the right strap end through the rubber ring and then through the loops of the chin cup (if necessary) to secure (figure 4).

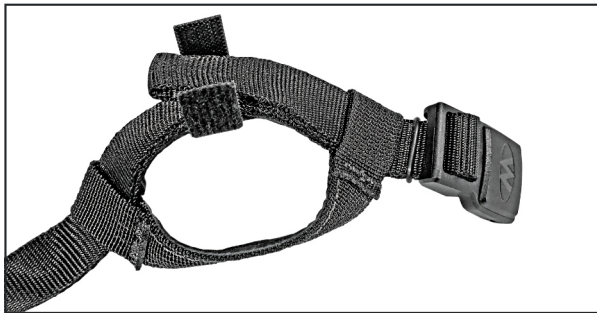


FIG 4

STEP 5

Adjust the chin cup so it is centered on the strap while wearing. Fasten the center hook and loop band to secure the strap to the center of the chin cup (figure 5).

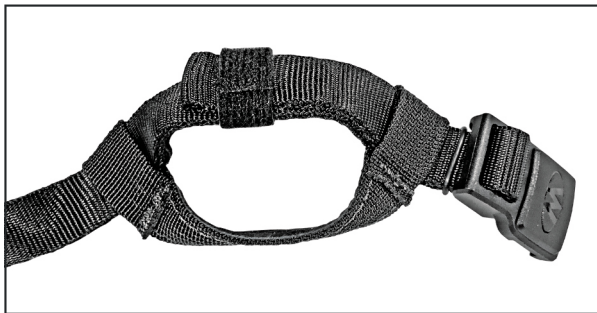


FIG 5

**TO REMOVE THE CHIN CUP, FOLLOW
THE ABOVE INSTRUCTIONS IN
REVERSE.**

G471