


SAR COMFORT PAD KIT

INSTALLATION INSTRUCTIONS

helmet accessories —

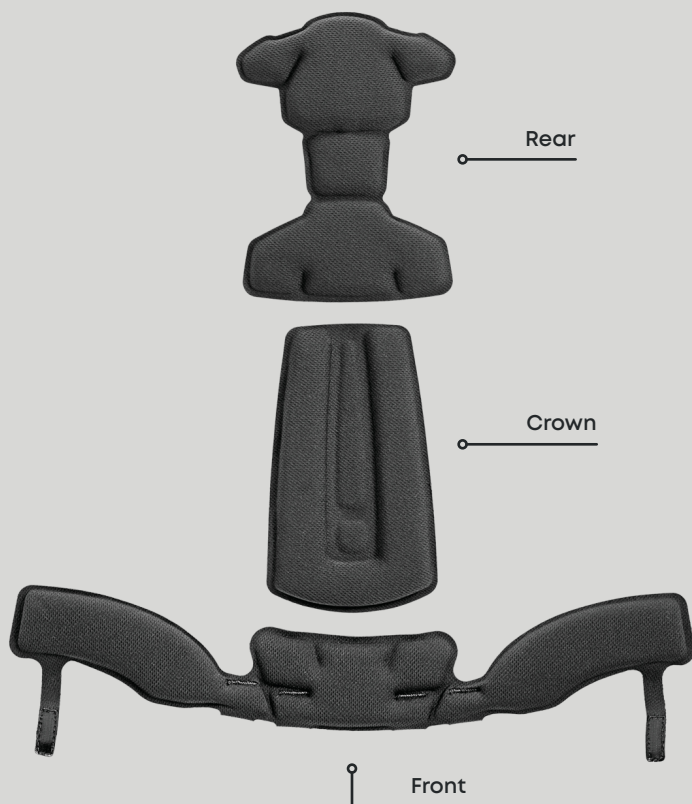

PURPOSE

To provide comfort and stability. Replaceable following wear and tear. Both thin and thick comfort pads are included and may be installed as needed for optimal fit and comfort.

CONTENTS

- One (1) Set of Three (3) Thin Comfort Pads (Front, Crown, Rear)
- One (1) Set of Three (3) Thick Comfort Pads (Front, Crown, Rear)

NOTE

The thin pad set comes preinstalled in the helmet on new purchases of the Team Wendy® SAR.

INSTALLATION

REMOVING EXISTING COMFORT PADS

STEP 1

Pull the existing rear and crown comfort pads from the hook fastener and remove from the helmet.

STEP 2

Pull the sides of the front comfort pad from the side plastic BOA® cable guide toward the interior of the helmet to detach from the hook fastener (figure 1).



FIG 1

STEP 3

On both the left and right sides, pull the gray plastic headband slightly towards the interior of the helmet and unhook the black BOA® cable by removing it from the channel in the headband (figure 2).

STEP 4

Locate the center of the front comfort pad and insert your thumb between it and the plastic front headband. With your thumb, press the plastic front headband into the helmet liner to keep it secured. With your other hand, pull the front comfort pad toward the rear of the helmet until it has detached (figure 3).

STEP 5

If your helmet currently has hook disks on the plastic front headband, remove and dispose of them. If necessary, clean with alcohol wipes to remove adhesive residue.

INSTALLING NEW COMFORT PADS

NOTE

If your head size is 57 cm or larger, start with the thin comfort pad set. If smaller, start with the thick comfort pad set. Interchange as needed for optimal fit.

STEP 1

Align selected front comfort pad with plastic front headband. Fold the front pad in half and pull the ends of the front plastic headband toward the center of the helmet interior. Simultaneously insert each end of the front plastic headband through the two loops



FIG 2

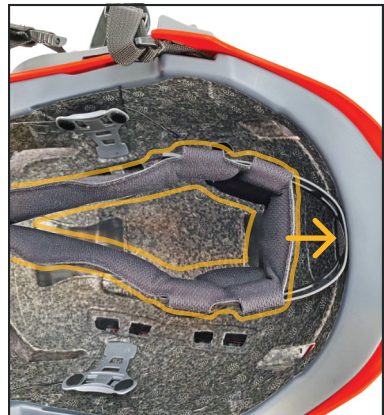


FIG 3



FIG 4

on the respective sides of the comfort pad (figure 4). Ensure that the front comfort pad is centered.

STEP 2

On both the left and right sides, carefully snap the BOA® cable back onto the plastic front headband (figure 2). Ensure that the cable is not twisted.

STEP 3

Align the comfort pad with the side plastic BOA® cable guide. Fold the tab on the comfort pad behind the plastic guide and insert it through the square hole (figure 5). Adhere the hook end of the tab to the back of the comfort pad (figure 6). Adjust the fit of the tab so that the comfort pad is snug and secure around the plastic guide. Repeat on opposite side.

STEP 4

Attach the selected crown and rear comfort pads into the helmet using the hook on the helmet interior.



FIG 5



FIG 6