

RECON™ TACTICAL SOLAS REFLECTIVE KIT

INSTALLATION INSTRUCTIONS

helmet accessories —



INNOVATE TO PROTECT



PURPOSE

The RECON™ Tactical SOLAS Reflective Kit enhances visibility using reflective tape.

CONTENTS

- > Two (2) Front Pieces
- > Two (2) Front Brim Pieces
- > Four (4) Crown Pieces
- > Four (4) Side Pieces
- > One (1) Rear Piece

INSTALLATION

STEP 1

Ensure your RECON™ Tactical helmet is clean and dry.

STEP 2

Apply the tape following the placements in figures 1 through 6. Align the shapes with the features of the helmet as shown.

NOTE

This kit includes genuine 3M SOLAS (Safety of Life at Sea) tape and patches that are U.S Coast Guard-approved. All included items can be installed on a helmet for maximum visibility.

NOTE

Removing the reflective tape from helmet may leave residue. Remove any residue by hand washing the helmet shell with a mild soap or detergent.

FRONT TAPE PIECES



FIG 1

FRONT BRIM TAPE PIECES



FIG 2

CROWN TAPE PIECES



FIG 3

SIDE TAPE PIECES



FIG 4

SIDE TAPE PIECES



FIG 5

REAR TAPE PIECES

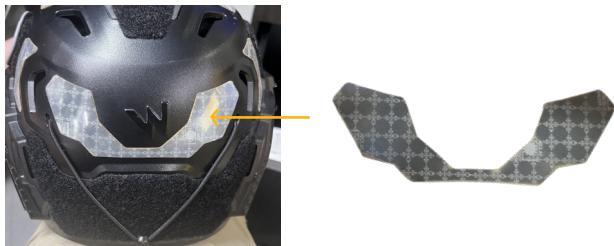


FIG 6