

EXFIL[®] PELTOR[™] QUICK RELEASE ADAPTERS

INSTALLATION INSTRUCTIONS

helmet accessories —



INNOVATE TO PROTECT



PURPOSE

Allows for tool-free attachment of all Peltor™ COMTAC systems, eliminating the rigid metal headband.

Compatible with the EXFIL® Rail 2.0, EXFIL® Rail 3.0, Team Wendy® SAR Rail and M-216™ Rail systems.

CONTENTS

- Two (2) EXFIL® Peltor™ Quick Release Adapters
- One (1) Boom Microphone Adapter

INSTALLATION

NOTE

If your headset has a headband, the headset must be fully disassembled from the headband before proceeding with installation. This may include irreversible changes, such as removing a cable from a sewn channel on the headband.

INSTALLING THE BOOM MIC ADAPTER

STEP 1

Select which mounting post will be replaced by the boom mic adapter post. Rotate the post 90 degrees and firmly pull it off the metal wire (figure 1).

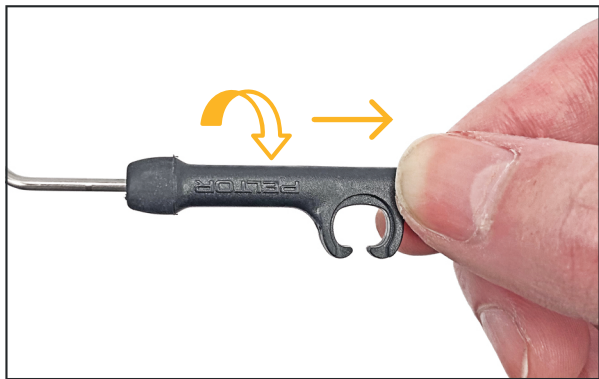


FIG 1

STEP 2

Press the boom mic adapter mounting post onto the wire. The post must be rotated 90 degrees from its final position.

STEP 3

Rotate the post 90 degrees to its final position, matching the orientation of the other mounting posts (figure 2).

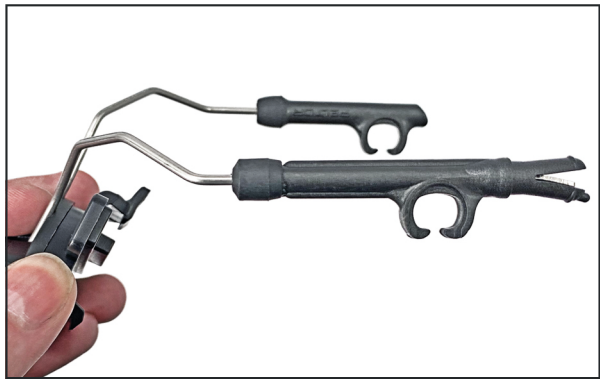


FIG 2

ATTACHING THE PELTORS TO THE ADAPTERS

ONE STEP

Clip the posts onto each side of the communication cup as shown in figure 3. Repeat on second communication cup.

ATTACHING THE ADAPTERS TO THE HELMET

STEP 1

Identify the W spacer plate on the helmet accessory rail. Use a 1/8" Allen key to remove the two screws that hold it in place. Remove the W spacer plate and accompanying screws from the accessory rail and set them aside for safekeeping.



FIG 3

STEP 2

With the metal guide wires down in the locked position (figure 6), insert the tab of the adapter into the T-slot on the helmet accessory rail (figure 4).



FIG 4

STEP 3


Center the adapter over the spacer recess in the helmet accessory rail and press firmly until you hear and feel a positive click (figure 5).



FIG 5

 NOTE

Raising the guide wires into the unlocked position allows the operator to swivel the communication cups away from the ears to rest against the side of the helmet when not in use. Snap the guide wires into the locked position for the communication cups to fit closely against the ears (figure 6).

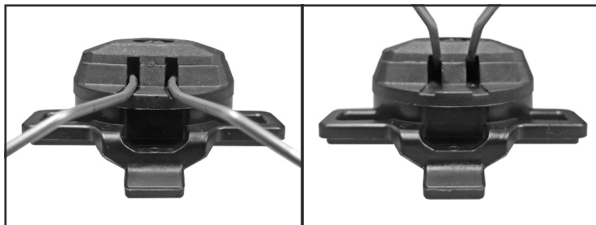

Locked Position

Unlocked Position

FIG 6

DETACHING THE ADAPTERS FROM THE HELMET

To release, firmly pull or push the thumb tab (figure 7).



FIG 7

G422